



- A1 Instrument cluster
 B14 Outside temperature indicator
 temperature sensor
 M3/3b1 Fuel tank sensor
 N3 Injection system control module
 N47 Traction systems control module
 N78 Transfer case control module
 S97/1 Steering lock switch

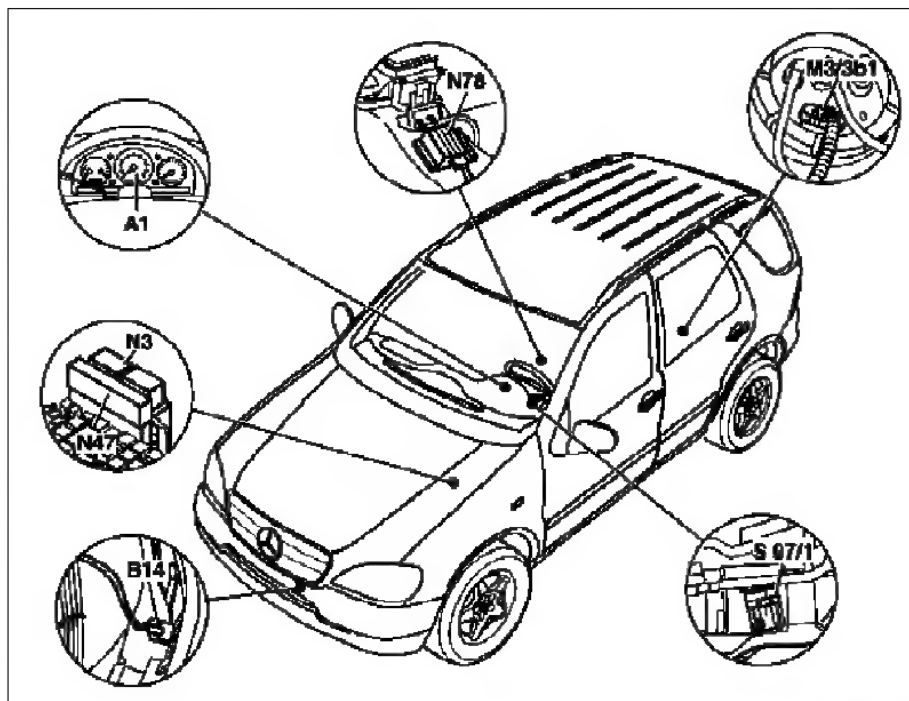

P54.30-0738-06

As of 3.98 also:

- S41 Electronic switch for coolant level
 indicator

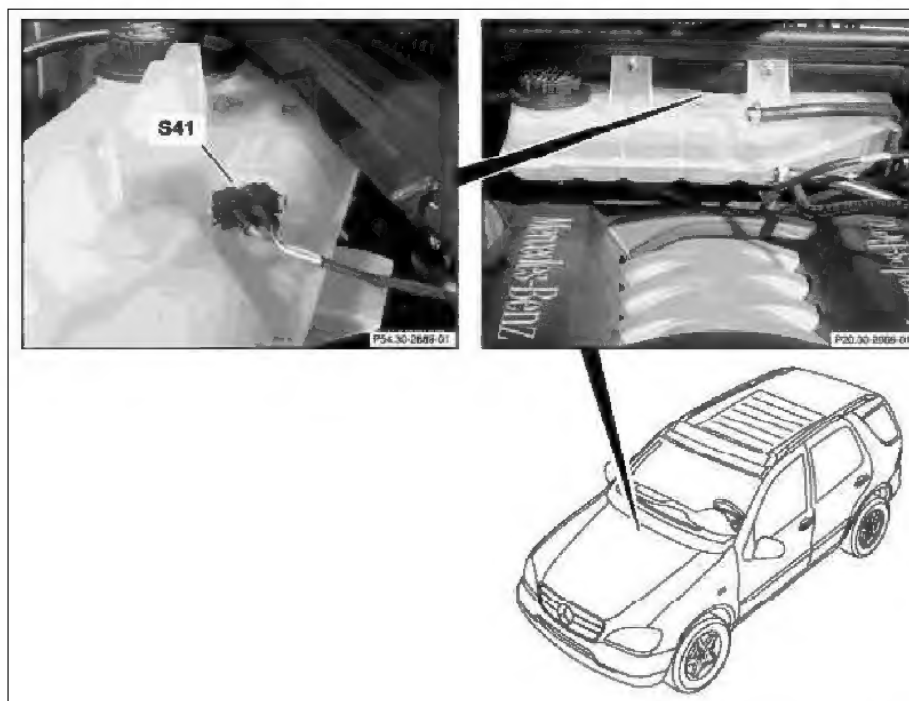

P54.30-2690-06